 




LT5000 USER'S MANUAL

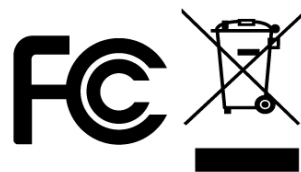

Contents

1. Safety Notices.....	4
2. Ready to use.....	5
2.1 Packing List.....	5
2.2 Appearance.....	6
2.3 Instructions on Keys.....	6
2.4 Features Overview.....	7
2.5 Technical Specifications.....	7
3 Quick Guides.....	9
3.1 Touch Panel Calibration.....	9
3.2 Switch On/Off.....	9
3.3 Orientation Sensor Setting.....	10
3.4 Battery management and charging.....	10
3.5 Operation of the function Icon	10
3.6 WIFI Setting	12
3.7 USB-HOST Function	15
3.8 Micro SD card storage	16
3.9 APK Installer.....	17
4 Operation Details.....	18
4.1 Desktop System 1(Music/Video/Picture/Recording/Camera).....	18
4.1.1 Music	19
4.1.2 Video	21
4.1.3 Picture	22
4.1.4 Recording	24
4.1.5 Camera.....	24
4.1.6 Explorer.....	25
4.2 Desktop System 2 (Shelves)(E-Book Function).....	25
4.2.1 Shelves(E-Book Function).....	25
4.3 Desktop System 3(Web Applications).....	26
4.3.1 IE Browser.....	26
4.3.2 Email	27
4.3.3 You tube Online Video	29
4.4 Other Functions.....	29
4.4.1 Calculator	29
4.4.2 Alarm Clock	30
4.4.3 APK Installer	30
4.4.4 SlideMe.....	30
4.4.4.1 Uninstalling Android Applications.....	32
4.4.5 Device Setting	32

4.4.5.1 Wireless And Network Settings	32
4.4.5.2 Voice and Display Settings	33
4.4.5.3 Location and Security Settings	35
4.4.5.4 Application Program Settings	36
4.4.5.5 SD Card and Device Storage Settings	37
4.4.5.6 Language Keyboard Settings	37
4.4.5.7 Date and Time Settings	38
4.4.5.8 Touch Panel Calibration	40
4.4.5.9 About the Device	40
4.5 Desktop Function Icon Settings	40
4.5.1 Add & Remove Desktop Function Icon.....	40
4.5.2 Wallpaper Setting.....	41
4.5.3 Tap icon Shortcut to search engine.....	42
4.5.4 Shortcut Notification.....	42
4.5.5 Add, Move or Delete Desktop Icon.....	42
5 Troubleshooting.....	42

Safety notices

- 1) Please keep the device away from strong magnetic field in order to avoid the damage to the product
- 2) Please do not let the player fall or rub or compact with hard objects during using, or it may cause surface scratch of the player, battery loose, data lose or damages of other hardware.
- 3) Never let this product expose to the humid environment or rain as the water leaked into could disable it to the extent beyond reparation.
- 4) Never clean the device with any chemicals and detergent, or it will damage the product surface and corrode the spray paint
- 5) You are recommended not to use the headset with large volume continuous, please adjust the volume to the size of appropriate security and control the using time to avoid the damage to your hearing, as excessive volume will cause permanent hearing damage.
- 6) Please do not cut off the power abruptly during software update and download, or it may cause data losing and system error.
- 7) Over-voltage, power cable strain, bending or squeezing by heavy objects is not allowed to avoid overheating or fire disaster.
- 8) In order to eliminate the risk of electric shock, do not touch the cable power plug with wet hands
- 9) Some movie, music and picture are under the protection of copyright, unauthorized usage is deemed as an infringement to the laws of copyright
- 10) Please don't turn on the device in where the wireless equipment is forbidden or when the usage of the device will cause interference and danger
- 11) All the wireless equipment may be interfered and influenced the performance
- 12) Please comply with any related restrictions and rules, wireless equipment will influence the flight of the plane; please consult the airline company if you use the device in the plane.
- 13) Please don't use the device in gas station, nearby the fuel and chemicals
- 14) Please comply with any related restrictions and rules; don't use

the device in where blasting operations are in progress

15) Only qualified maintenance personnel can install or repair the device

16) Please use the original accessories and battery, don't use the incompatible products

17) The device is not waterproof, please keep it dry

18) For the sake of data safety, please back up the important information of the MID or keep a handwritten record.

19) When connecting with other device, please read the user manual for detail safety instruction, please don't connect it with incompatible product


20) If the actual settings and operation method of the product are inconsistent with the user manual for the losing of firmware, please use the software in the CD-ROM and refer to the instruction of the manual to re-update the software

2 Getting your device ready for use

2.1 Packing List

Components	Quantity
MID Device	1
Charger	1
Earphone	1
USB Cable	1
User Manual	1
CD-ROM	1
Warranty Card	1

 2.2 Product Appearance

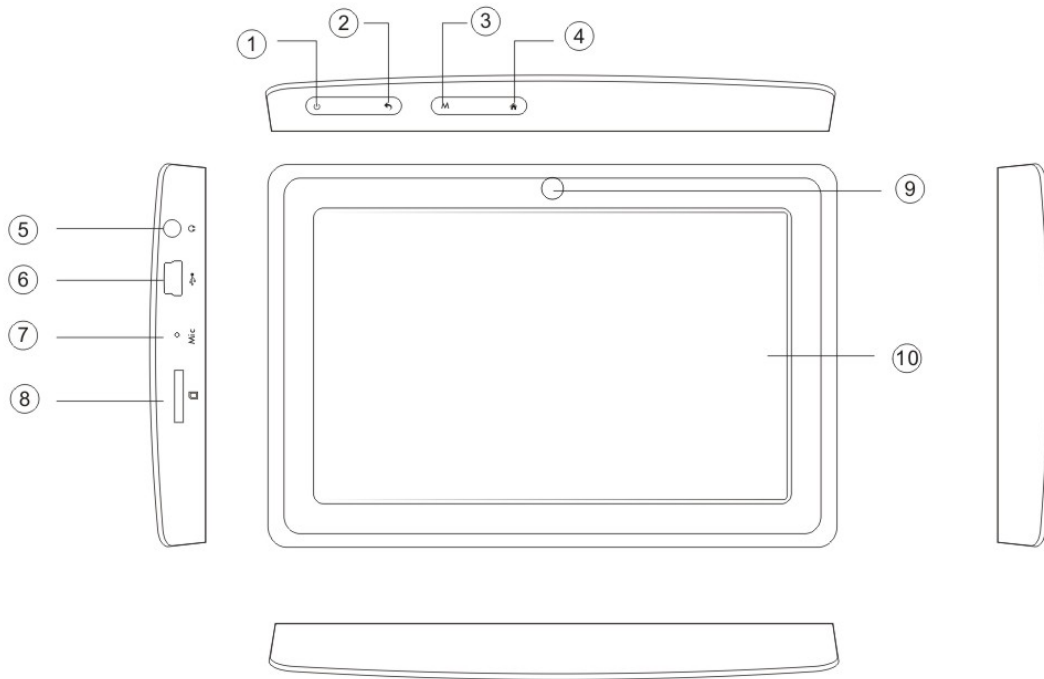

2.3 Instructions on Keys

Symbol	Name	Description
1	POWER	Press this button shortly to enter sleeping/wake up mode,press long to switch ON/OFF
2	ESC	Press shortly to return
3	MENU	Press this button shortly to enter the submenu
4	Home	Press this button shortly to enter the homepage/main menu
5	Earphone Jack	Earphone Jack
6	Mini USB Port	Port for charger, PC, external USB Driver,3G Dongle, Mouse, etc
7	MIC	Microphone
8	Micro SD slot	Micro SD Card Slot
9	Camera	Camera
10	Display	Display area

2.4 Features Overview

- Adopt the RK2818 as the main chip, ARM embedded Dual CPU Structure (ARM600MHZ+DSP400MHZ) ,ANDROIED2.2 smart operation system
- **5" TFT** touch panel LCD display, 800x480 pixel resolution
- Support 4GB-8GB built-in Flash Memory, support 128MB-32GB external Mirco SD card
- Support HD 720P MKV、AVI、RM、RMVB、MP4、MOV、VOB、DAT 、 FLV 、 3GP,H.246 etc formats , support Max resolution1280*720
- Support JPG、JPEG、BMP、GIF etc. picture formats
- Support MP3、WMA、OGG、APE、FLAC、AAC、multi EQ modes
- Support TXT、LRC、PDF、Html、Htm、EPUB file formats, Support built-in Wifi, you can connect with the broadband wireless internet and operate various software in the ANDROID 2.2 OS.
- Support built-in microphone record function
- Support USB-HOST and external U-disk,Mouse,etc
- Support external 3G USB-DONGLE wireless network card(3G card or USB-Dongle should buy separately)
- Support G-sensor screen rotation function.
- Support Earpieces and speaker
- Supports multiple languages
- Can be used as USB portable hard disk, driver not needed for WIN2000 or above


2.5 Technical Specifications

LCD Display	Size	5" TFT touch panel LCD display, 160k color
	Resolution	800*480
PC interface	High speed USB2.0(FS)	
Built-in Flash	Flash Memory : 4GB~8GB	
Built-in RAM	RAM: DDRII 128MB(256MB option)	
Capacity Expansion	Support Micro SD Card, capacity 128MB~32GB	
Power Supply	Built-in 3.7V Lithium rechargeable battery Charger: Input: AC110V~240V, Output: DC 5V@800mA	
Music Function	Format	MP3、WMA、OGG、 APE、FLAC、AAC、 WAV
	Headset max. output	(L) 5mW+ (R) 5mW (320hm)
	MP3Bit rate	8Kbps ~ 320Kbps
	WMA、WMV、Bit rate supported	5Kbps ~ 320 Kbps
	Frequency response	20Hz to 20KHz
	SN ratio	90dB
	Distortion	<0.05%
Video Function	Play format	MKV、AVI、RM、RMVB、 MP4、MOV、VOB、 DAT、FLV、3GP,etc
	Max.resolutions supported	1280*720
	Ratio	16: 9、full screen for optional
Photo browse	JPG、JPEG、BMP、GIF supported	
E-book Function	Format Supported	TXT、LRC、PDF、Html、 Htm、EPUB, etc
	Max. capacity	20M
WI-FI Function	Main chip set	Samsung SWL-2480 , 802.11b/g
	Transmission rate	Max54Mbps
	Transmission Distance	Max100m
	Work Frequency	2.4GHz
Recording function	Format supported	3gpp Format
Working temperature	-5 ~ 40 °C	
Languages	Simplified Chinese、Traditional Chinese、English、 Japanese、French、German、Spanish, etc	
Operation systems supported	Windows ME/2K/XP	


3 Quick Guide


3.1 Touch Panel Calibration

 When there are offset and invalid tap on the touch panel, enter the Calibrat mode in system setting to log into the interface of the Touch Panel Calibration, tap the center of the “Cross” indicated by the red circle one time, the screen will display “Calibration Successful” message when it is OK, see the figures below

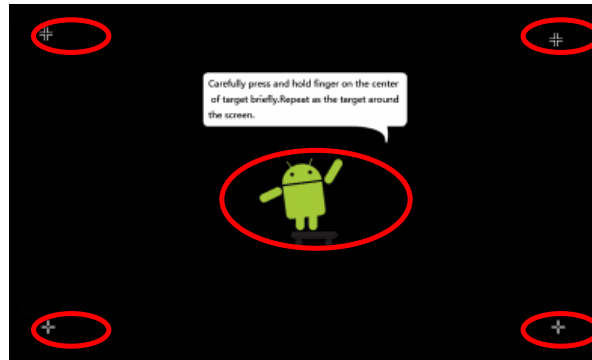

3.2 Switch On/Off

 Switch On and Unlock: When the device is in the OFF mode, press and hold “Power” key for 3 seconds to enter the Android startup progress bar, it need about 100 seconds enter to the system desktop, The LCD is under locked mode, please press and pull the  icon to the green point, then the LCD will unlocked automatically, see the figures below,

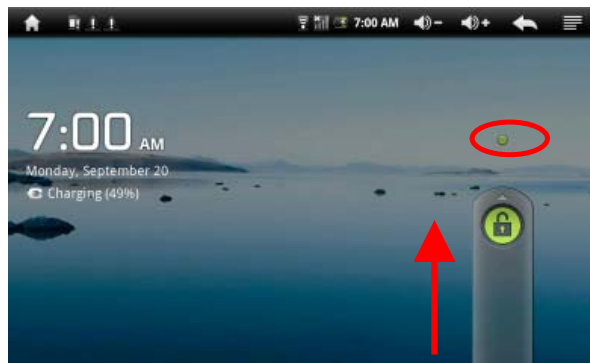

Power Save Modes and lockscreen: Press the “POWER” key shortly after starting up, system enter to SLEEP power save and lockscreen mode. Press the “POWER” key, system will return to bright in 1 second

Note: The primary operation of the device will not stop under the power save mode, just the LCD is shut and with black screen. For example: playing music, movie, etc

Switch OFF: When the device is in the OFF mode, press and hold

the “POWER” key for 3 seconds, the screen will display the power off interface, choose the power off item to confirm, the system will shut automatically



【Note】 When the device with low battery it will alarm continuous and shut automatically without charging. If the device can not start up please check if the battery is low, and try it again after the battery is charged

3.3 Orientation Sensor Setting

The tablet contains a sensor that will automatically change the orientation of most screens as you rotate the tablet. The sensor works best when the tablet is rotated perpendicular to the ground (i.e., when the tablet is held upright and not flat on its back).

【Note】 The Orientation sensor can be turned on or off in the Orientation in Display setting menu.

3.4 Battery management and charging

- a. Charge the battery at about 3-5 hours to make sure the battery is fully charged at the first time.
- b. Insert the micro port of the battery adaptor into USB slot on the device, and connect the other side with the power socket. Then the Power indicating lamp of the device is in high light blue color, the desktop icon of the battery  keep rolling which shows it is charging, please wait until the battery is fully charged, don't disconnect the power when charging. Once the battery is fully charged, the indicating lamp will change into dark blue, the Icon on the desktop  will stop rolling. When the battery is exhausted completely, please charge at least one minute before start it up

【Note】In order to keep the battery working in best condition, please pay attention as below:

- Please don't charge the power in high temperature.
- No need to release the power for this Li- battery, you can charge the power even there is still some power in the battery, no need to charge the power when the it runs out.
- In order to keep the battery in good condition, Make sure to charge the power once per two weeks if you don't use this device for a long time.

3.5 Operation of the function Icons.


a . Definition of the Function Icons




Icon	Function instruction	Icon	Function instruction
	Back to main menu		Note when the system finds new devices.
	Show current power status		Set the alert time
	The current system time		Reduce the volume
	back		Louder the volume
	menu		Menu for Function Block.
	Google search		Switch the interface
	System clock		WIFI on/off
	Music playing tool bar		Update icon for Music/audioinventory


	new mail		
---	----------	--	--

3.6 WI-FI Setting

  a. **Turn on the WIFI setting:** Tap the module icon , enter into function menu list; press “setting” enter into the setting interface; press “wireless and network” to setup, just select the WIFI as below:

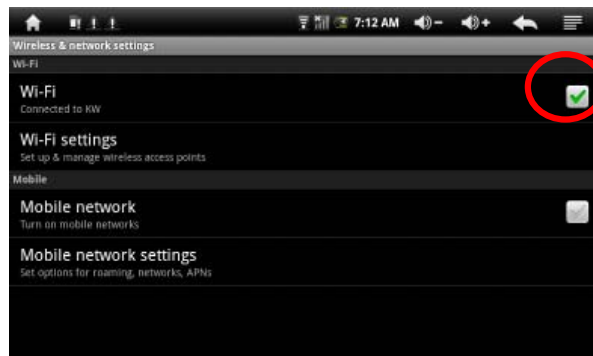


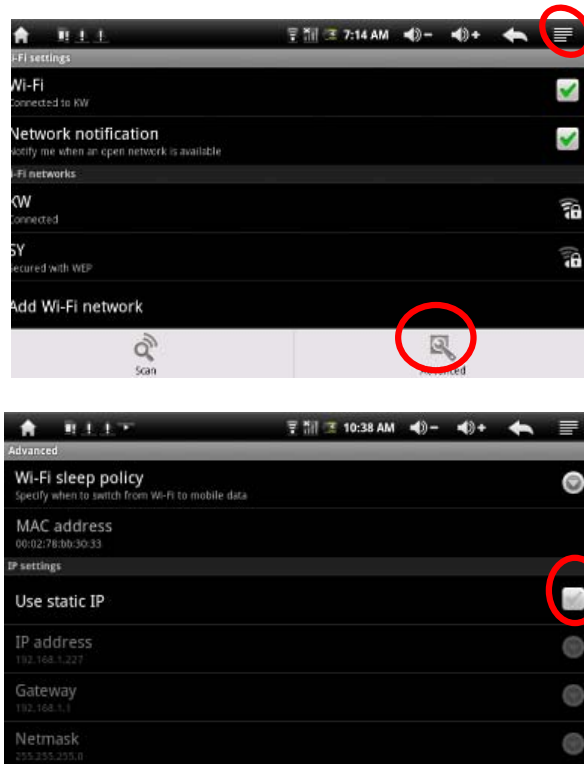 
b. **Set the WIFI and connect to the network:** Press “Wifi setting” to enter into the wifi, the system will find the WIFI name automatically. Please refer to the picture as below, it has found two WIFI network name:

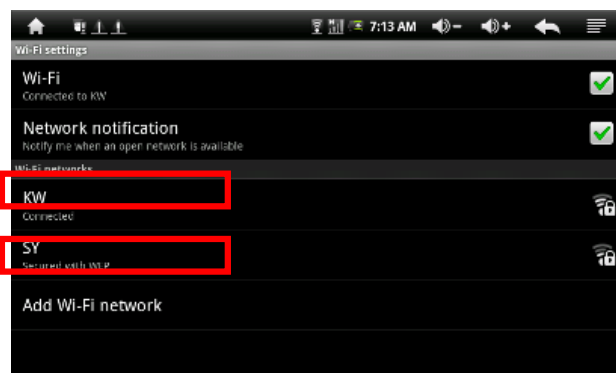


c. **IP address setting and connection:** There are two setting methods to set the IP address.

1. **Distribute IP Address automatically:**


Whether it distributes the IP address automatically or not is depended on the WIFI Router’s setting, if it distributes the IP address automatically, just press the top right corner of the screen “” to enter into “advanced” setting to cancel the selection of the “Use static IP”



 Press the right top menu “☰” on the screen and press “save” when complete this setting, see the figure as below:


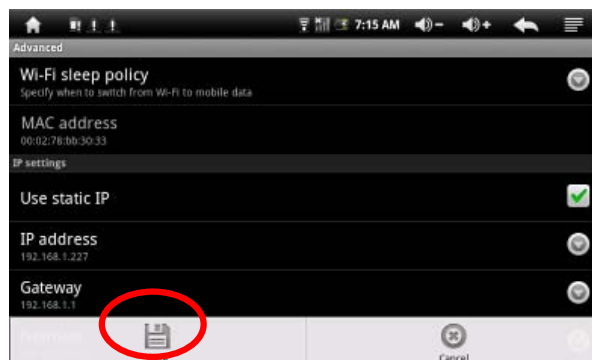


Press back when complete saving, press the WIDI network name, For example, double press “KW”, then it will to enter into a interface to ask you input the code. Then input the right code, press “finish”. Then the system will connect and distribute IP address automatically, it will show “connected” once the system is completed connection. You can see the network connecting status accordingly when you press the network name, see the figure as below:

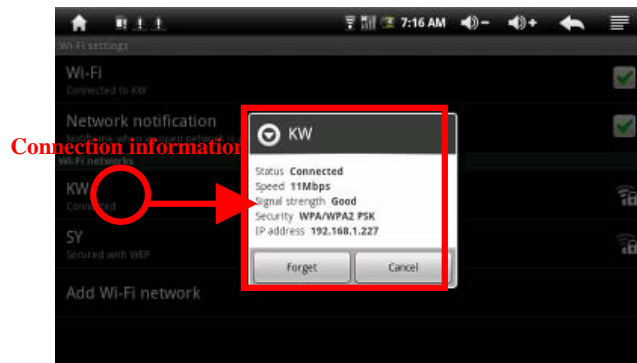 


2. Manual setup IP address:

  
Whether Using manual setup IP address or not, it depends on the WIFI Router's setting, if distributing the network name by this way, just press the top right corner of the screen "☰" to enter into "advanced" setting and select the "Use static IP", then set the IP address as it from the Router. See the figure as below,

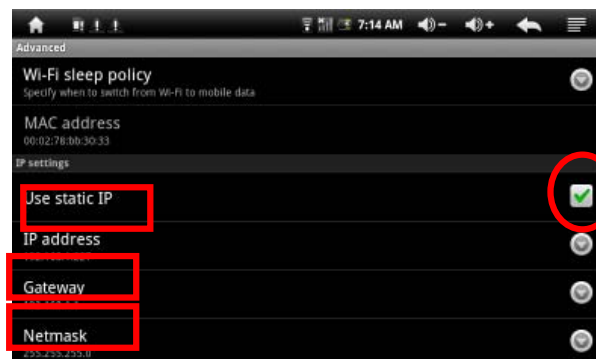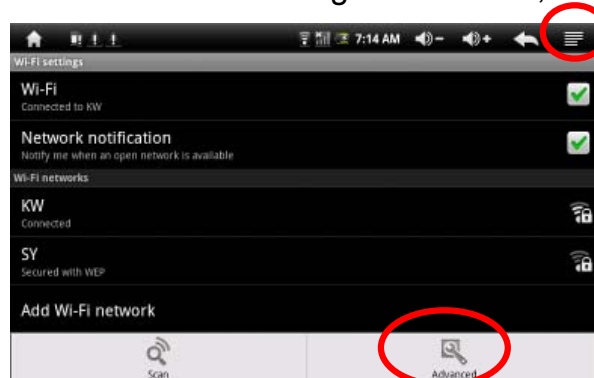


 Press the ☰ in the right top of the screen to press "save", see the figure as below:

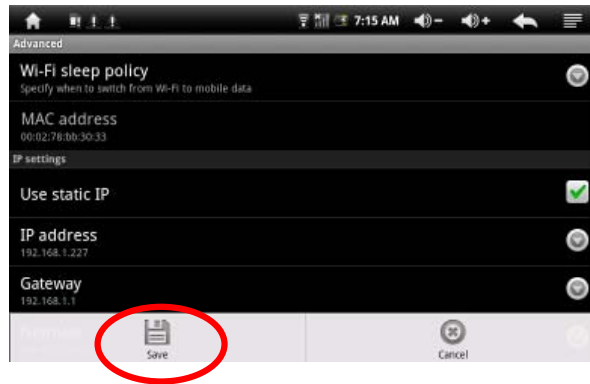

Back to press the WIFI network name when complete saving. For example: press “KW”

 
Then it will have an interface, asking for input the code, input the right code, and then press the “finish”. Then the system will be connected and will distribute the IP address automatically, it will show “connected” once the system is completed connection. You can see the network connecting status accordingly when you press the network name. There will be a WIFI icon “” see the figure as below:


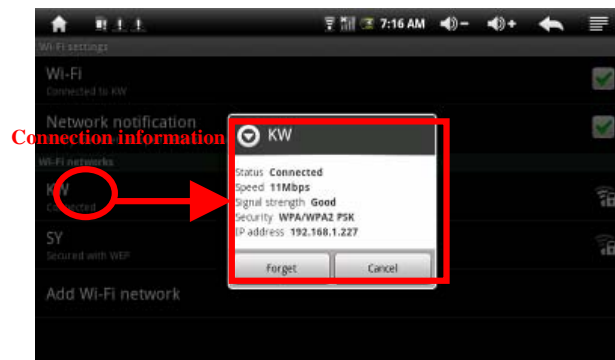


3.7 USB HOST Function:

The default setting of USB Host is disabled for the first time to use this device or after resetting. To switch on U disk to recognize USB host function, click “USB mode select” in setting menu, and then click USB mode to open it.


a. Turn on The USB- HOST:

  Press menu icon , enter into the function list, press “setting” to enter into setting interface, press “USB Mode select” to select the “HOST MODE” ad it shows in the red circle as below:

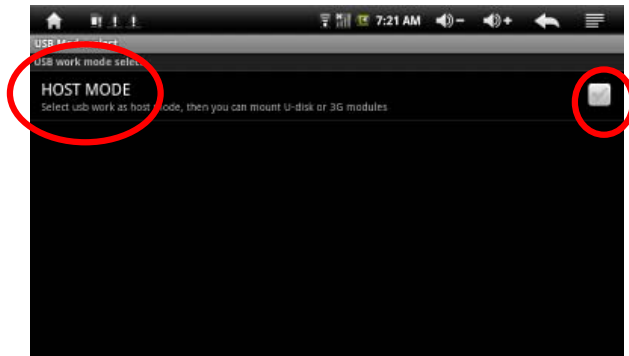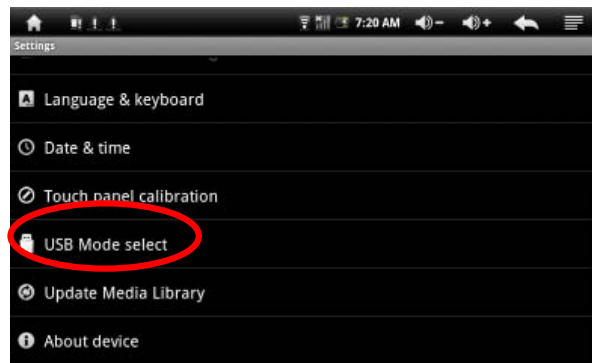

b. Read U-disk:

 
Insert the U-disk into the HOST port, press the “Resource manager” in the desktop, press “USB” enter into u-disk, see the figure as below:

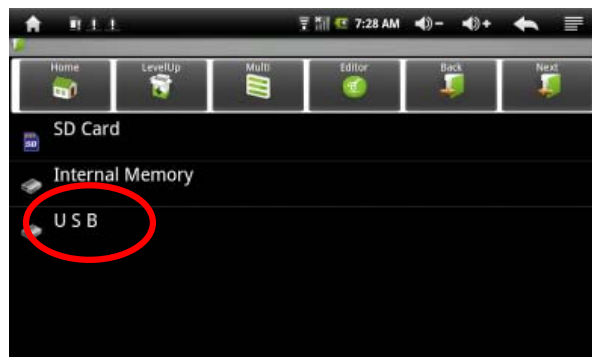

c. External 3G USB Dongle:

Insert the 3G USB- Dongle in to the Host port, connect with the internet directly.

 3.8 Micro SD Card Storage

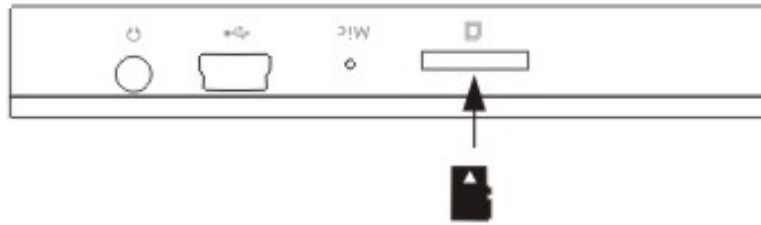


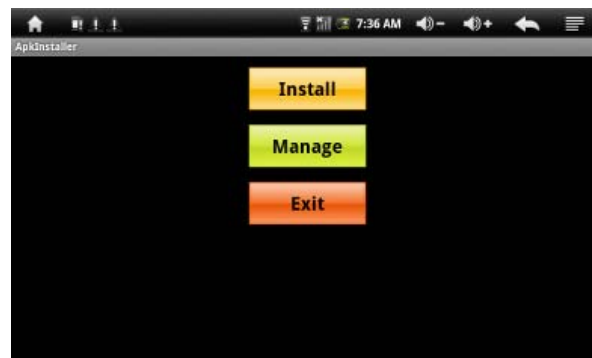 
There is a Micro SD card slot in this device, it support reading the files in Micro card. Insert the Micro SD card into the card slot in right way, when take it out, just push the micro SD card toward to the inside, then the slot will release the micro SD card, the micro SD card will pop out automatically, take it then.

- Please insert the micro SD into the card slot in the **left** side of the device.
- Don't pull out the card when operating (reading, copying), otherwise, it may cause data error
- Don't use the micro SD card under high temperature condition.
- keep the micro SD card far from the liquid and erosive materials

3.9 APK Installer

This device supports the third part Application Program based on Android. Many Application Programs can be got from internet, just copy into the flash of this device or Micro SD card, and then proceed to install and use.

- Press the APK installer “” and the APK installer interface will popup: Install, Manage, Exit.

 


- **Install:** Press install, enter into the APK installer interface.



Internal Memory means built-in flash, SD card means T-Flash;

After entering, select the APK format setting program in the right side, tap to install, back to the main interface when complete this

operation, then it finished the installing, and there is a relevant software menu accordingly.

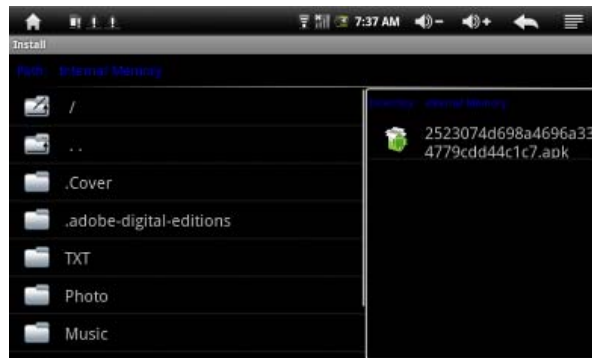

  - **Manage** : Tap manage and enter into the third part software interface.

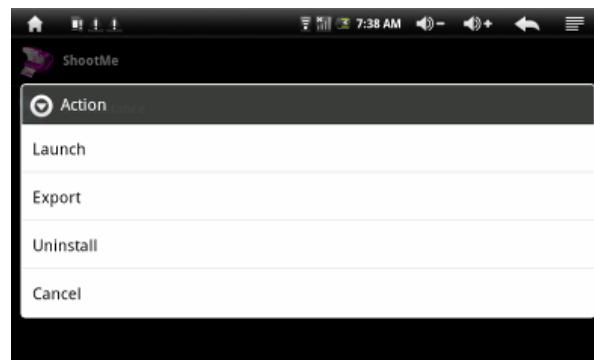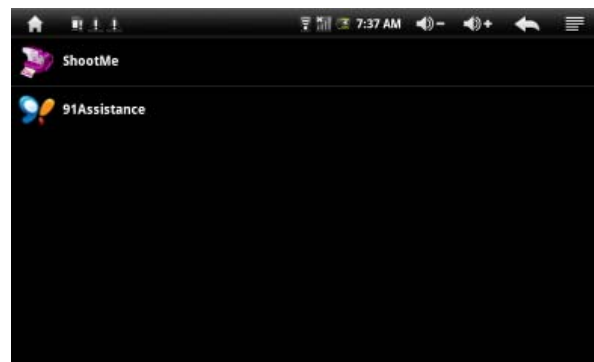

- Startup: run the software.
- Export: export the software to the SD card.
- Uninstall: uninstall the software.
- Cancel: cancel the operation.
- **Exit**: back to the main interface.

4 Operation details:

 
4.1 Desktop System 1(Multimedia Music / Video / Picture / Recording)

 




4.1.1 Audio player



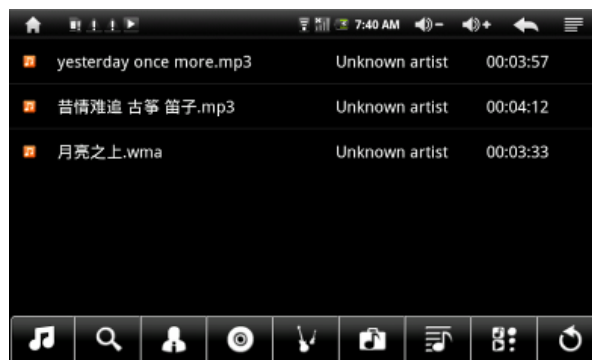

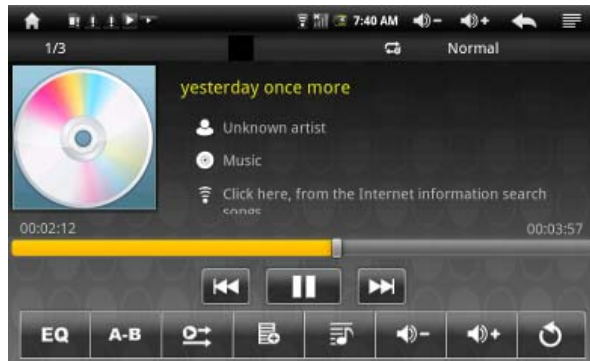














In the main menu or desktop, click the icon  to play the audio

- When no music files in the audio player playlist, the system will automatically load the music files from the card to the audio player playlist after turning on the audio player (the device supported audio file format: mp3, wav, wma). The playlist as shown in the above figure
- If too more songs in the Music playlist area, slide up/down the touch screen to page up/down
- **Click your favorite song** in the list to play music as shown in the following picture






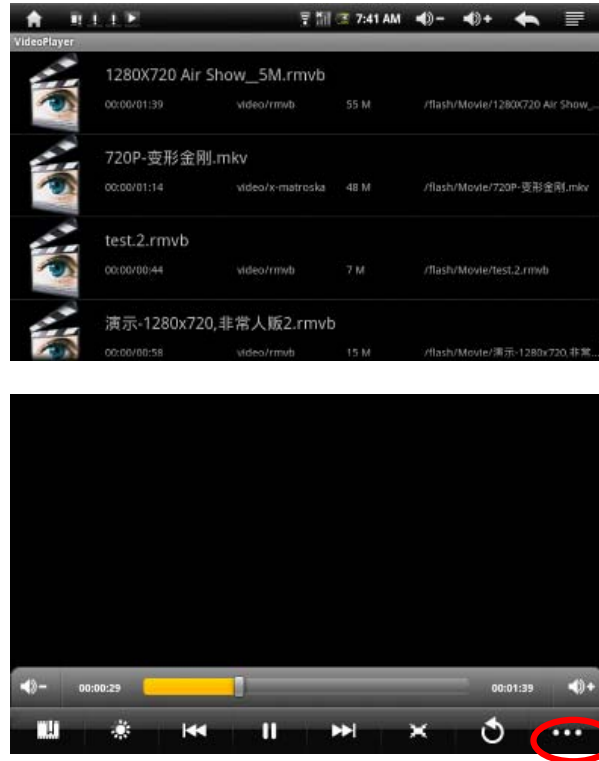 
- In the music playing interface, tap  enter the audio playing list
- Drag the playback progress bar  to adjust audio playback progress
- Audio player buttons description


button	description	button	description
	Browse the playlist		online music searching
	artist		album
	other audio		to view the music files of disc
	New Playlist		switch to audio playing
	quit		EQ setting(normal,rock,popular, classical,heavy,Jazz,Custom)
	A-B repeat		Playing order mode
	add audio to playlist		pause an audio
	raise the volume		lower the volume
	go to previous song		skip to next song
	play audio		



Note: Audio player can play WAV record files.








4.1.2 Video


- In the main menu or desktop, tap the icon  to enter the video player interface, open the video files, **click your favorite video** in the list to play as shown in the following pictures



- the device supported audio file format: MKV、AVI、RM、RMVB、MP4、MOV、VOB、DAT、FLV、3GP
- When no video files in the video player playlist, the system will automatically load the video files from the card to the video player playlist after turning on video player
- Drag the playback progress bar  to adjust video playback progress
- Video player buttons description:

button	description		button	description	
	Adding video bookmarks			Brightness Adjusting	

	go to previous chapter		skip to next chapter
	Play and pause a video		Video format 16: 9 /4: 3
	quit		menu
	lower the volume		raise the volume


- Click this button  to set up delete bookmark, play mode, etc.
See the figure as below



- Tap play mode to select one of play modes: single, repeat one, repeat all, or tap back to A menu.

 

 
 




4.1.3 Picture Browsing

- In the main menu or desktop, tap the picture browsing icon  to enter the viewing interface



Picture Browser button description:

button	description	button	description
	Image orientation setting		Rotate the image
	Cut the image		Set the image as Wallpaper
	Image information		Quit the interface of Image Browser

 
Drag the below bar from the bottom of the display, slide the bar to zoom in or zoom out the picture.






- **Adding image** (supports the format of picture: BMP、JPG、JPEG、PNG、GIF)

When no files in the photo list, the system will automatically load the image files from the card to the photo browsing list after opening the photo browser..Open the corresponding folder, find the image file and add the picture you want

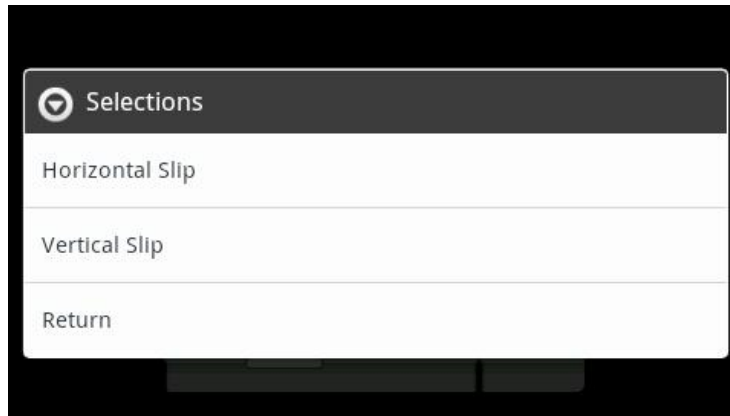
- Press the Menu button to enter the slip direction setting interface.






4.1.4 Recording function

 
In the main menu or desktop, tap the record icon  to enter the record interface, tap record button  to start recording, tap this button  to stop recording, the system will remind you to use this recording or give up, please select manually.

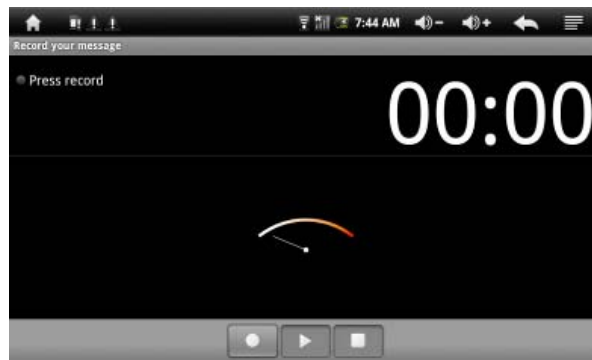 Recording playing: please select audio player to play the recording, firstly select the record files from the explorer, then click it and playing, further details please refer to 4.1.1(audio player).




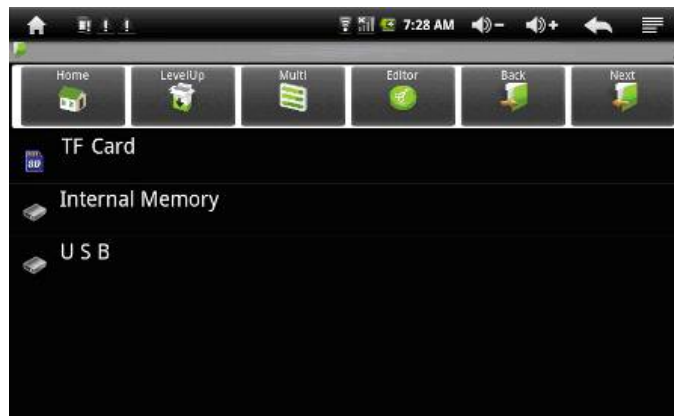 
4.1.5 Camera

In the main menu or desktop, tap the camera icon  to enter the camera interface. Tap the  button to take photos. Drag the round button to  on the screen to change to video mode, see the figure as below:

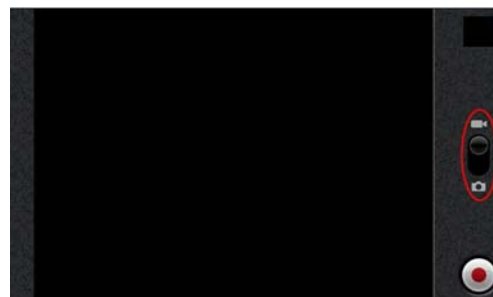

4.1.6 Explorer

In the main menu or desktop, tap the explorer icon  to enter the Management Interface, tap【SD Card】、【Internal Memory】or 【USB】 to open their root directory folders to do adding, copy, paste, delete etc, operations. Long press the file or folder to do copy, delete, paste, remove operations options, then tap previous/next folder or a menu to finish the copy, delete, paste, remove to the correct directory. To copy files to other place, click 【Editor】 and press paste to choose the location 【SD card】、【Internal Memory】 or【USB】 for selection files



4.2 System desktop 2(Shelves)(E-Book Function)

 
Support formats of E-Book: TXT、LRC、PDF、Html、Htm、EPUB etc., Support automatic browsing, zooming, bookmarks, page etc.








4.2.1 Shelves (E-Book Function)

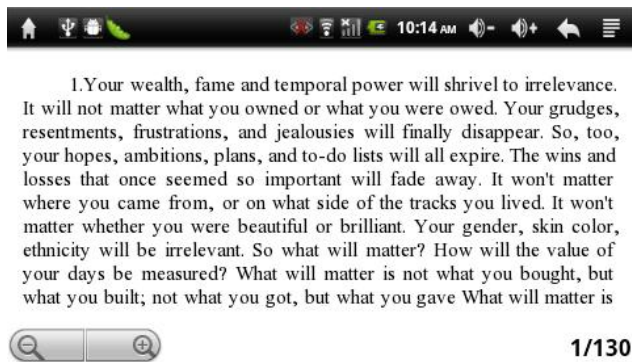In the main menu or desktop, tap Shelves application icon to read the e-book.

- Open the folder and select the text file;
- Double tap E-book files to read, tap the left/right side of touch screen to flip over;




- Zoom the font: click Zoom button  to zoom the font, the available font sizes: S、M、L、XL、XXL
- Jump Set: tap the jump button  and Pop-up dialog box, input the number of pages you want then click confirm so that it automatically jump to the specified page.
- Bookmark setting: tap bookmark icon  to add, delete display the Bookmarks.
- Outline: tap the outline icon  to view the outline of book
- Book info: tap book info icon  to view the book name and information of the author.

4.3 Desktop System 3(Web applications)



4.3.1 IE Browser

When WIFI connection is in normal(details refer to chapter 3.6 WIFI SETTING), tap the main menu or desktop's IE Browser icon  to enter to the IE interface, click the address bar and input website and click Go to enter a corresponding web page, you can view the corresponding website information.



 
Note: The IE Explorer uses the popular third-party IE Explorer software, please follow the IE Explorer's standard operating mode to operate.







4.3.2 Email

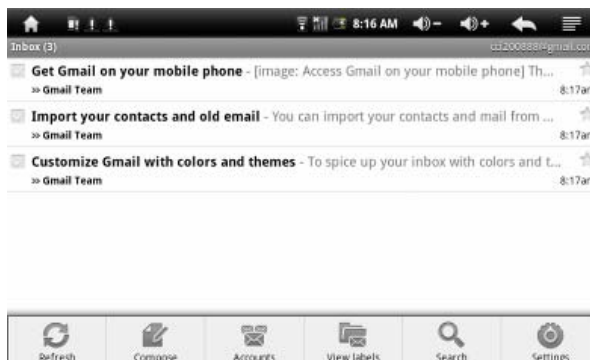Inbox



Auto enter inbox interface when succeed in landing:


This interface shows received E-mails, double click each E-mail, to check, reply to sender, reply to all, etc.





Button	Description	Button	Description
	Refresh		New Email
	Account		Check label
	Search		Setting

 Edit E-mail

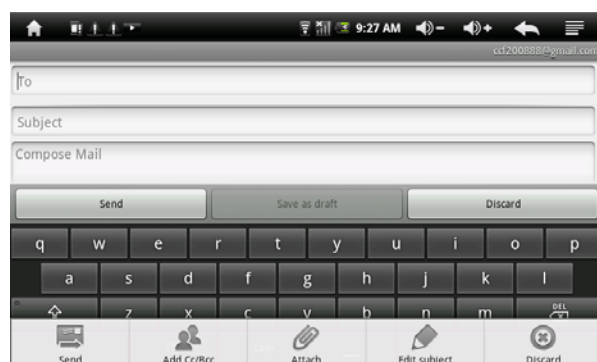
Tap taskbar , pop up toolbar, and tap  enter Email writing interface.




Tap add address Add Cc/Bcc icon  to add E-mail Cc/Bcc header; on the contrary, tap it again to delete.


Tap Attach icon  to add E-mail attachment.

Tap Edit Subject icon  to enter subject line and edit directly;

 
Tap Discard icon  to give up writing E-mail;

Input receiver address & relevant information, Tap Send icon  to send E-mail;

Sent


Tap icon  to choose sent, pop up interface as below:

This interface shows sent E-mails, double click each E-mail , , to check, reply to sender, reply to all, etc.

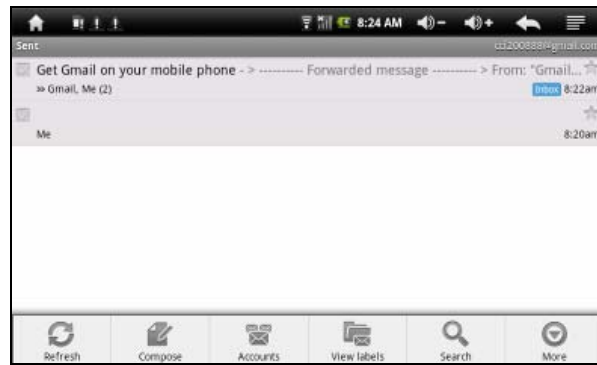

4.3.3 You Tube online video.

You Tube is the world's leading video website, you can upload and share videos on You Tube. It has become a leader in the same type websites, and created a number of internet celebrities and stimulated creativity on line. You Tube has become the most-visited video cast website of the world.

 
Tap You Tube icon  on the desktop, enter <http://www.youtube.com/> directly, you can enjoy thousands of videos on line.

4.4 Other functions




4.4.1 Calculator

Click Calculator icon  on the desktop to open calculator:

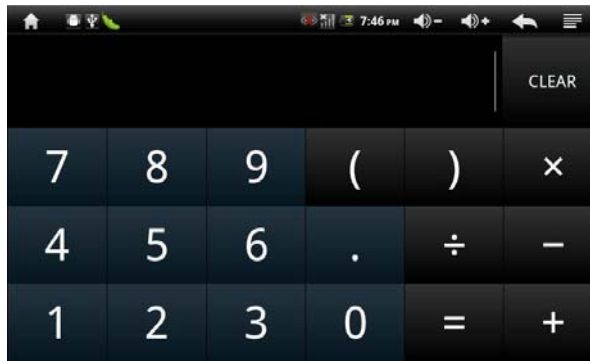

4.4.2 Alarm Clock

 
Tap Alarm Clock icon enter setting interface, you can select the behind the clock time to set three clocks simultaneously, details as below:

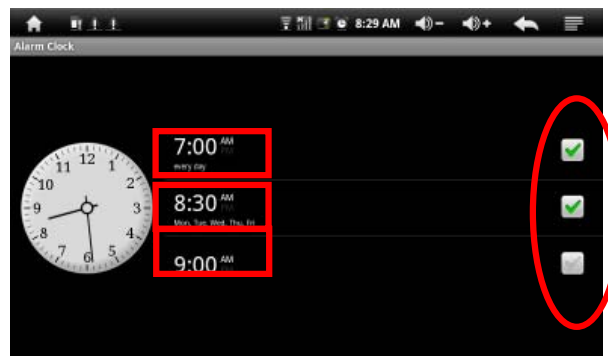

tap any of above clock time to set up: time, bell, repeating and label.

- Everyday: Setting repeat the bell at the same time everyday
- Monday to Sunday: can choose the days and same time of each day
- No: to set up the bell for one time, no repeating
- Pattern: to choose the bell pattern

4.4.3 APK Installer

Tap APK installer icon  on main menu or desktop enter installing interface, to get details from 3.9 APK chapter.

4.4.4 SlideMe

 
You can also download an install additional applications from SlideMe, the web browser, or other sources. Downloading and installing new applications to your tablet can extend its functionality in many ways.

The tablet must be set to allow installation of applications from non-Market sources. The Unknown sources option can be set in the Application setting.



Support for third-party applications is provided by their respective applications developers. Curtis is not responsible for the behavior of these applications; please review the description and terms of use provided by third-party developers carefully before installing applications on your tablet.

Tap SlideMe (SAM4.0) icon on main menu or desktop to enter SlideMe Marketplace.

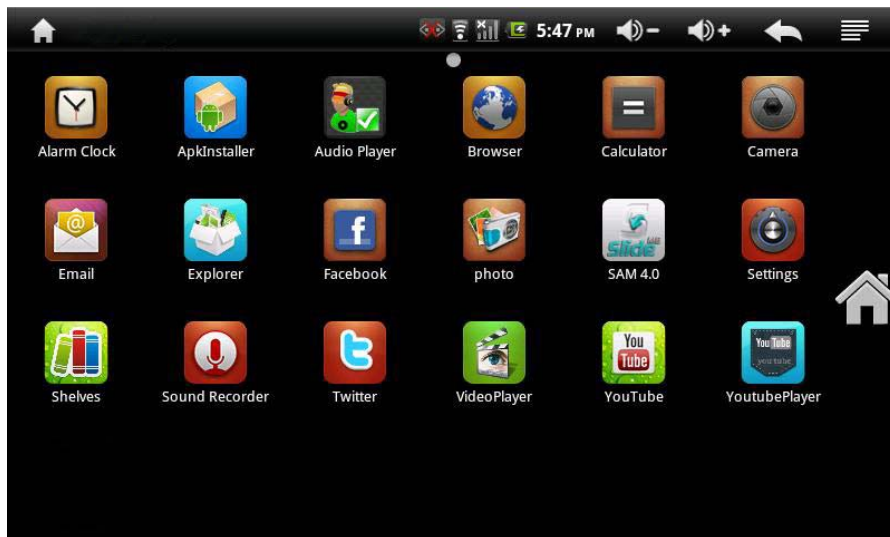

Utilize these tools to find the desired application from different categories.



Simply click on the application to view more details and click the download button towards the bottom of the screen and then click install after reading application details and accept the Terms and conditions for installation.


4.4.4.1 Uninstalling Android Applications

- Go to the Settings icon and select Applications.
- Next, click on Manage applications.
- A list of installed applications will appear.
- Select the one to be uninstalled and simply click Uninstall.



Be especially cautious with applications that request access to many functions or to a significant amount of your data. You are responsible for the results of applications installed on your tablet.

4.4.5 Device Setting

 
Tap  of main menu or desktop to set wireless and network, sound, display, location and security, application and so on, slide on screen to page up/down

4.4.5.1 Wireless And Network Settings

Details please refer to WIFI setting in Chapter 3.6

4.4.5.2 Voice and Display Settings

- Tap **【Sound】** enter to settings interface

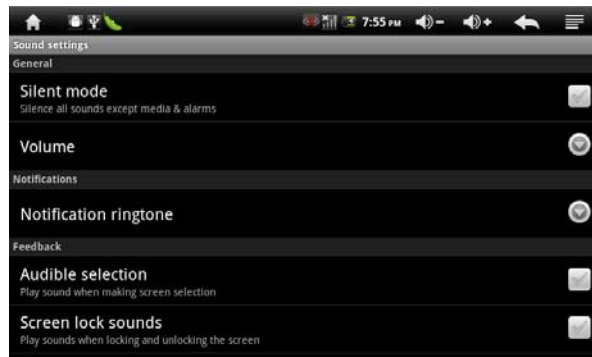

a Media volume settings:

tap **【Volume】** to enter setting interface ,then to set up music and video volume

 


b Ringtones settings

to choose any of defaults ringtones:



- c. Set operating sound (screen choosing) and SD card notifications as optional, tap and tick ☒ till highlight displaying.
- Display settings:

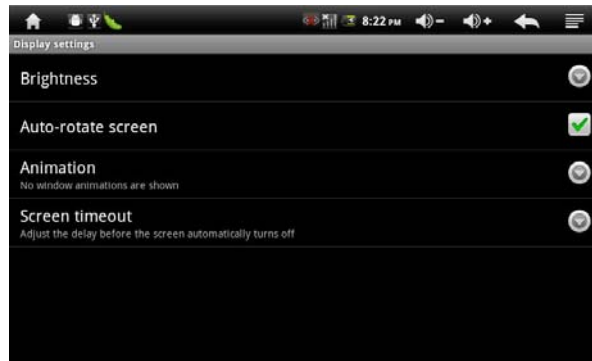



a 【Auto-rotate screen】


The display screen will change the direction automatically when it rotating

b 【Animation】

 
Display all animation in all windows

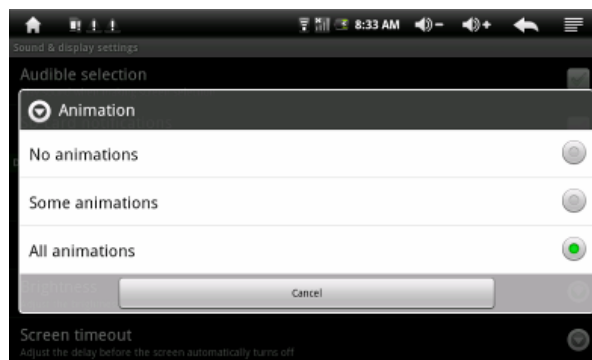

 c 【Brightness】 Drag  to adjust brightness, tap “OK” and “back”.

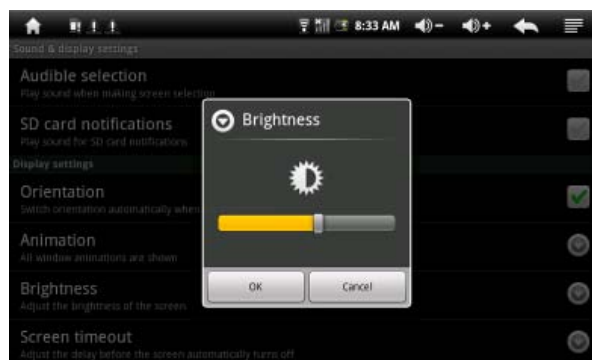


d 【Screen timeout】

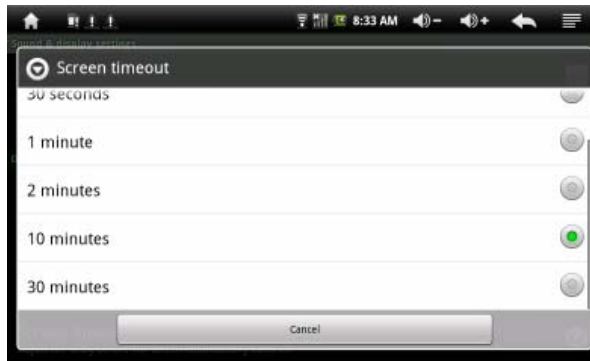 


4.4.5.3 Location and Security settings

 
Tap 'Location and Security' to enter the setting interface:

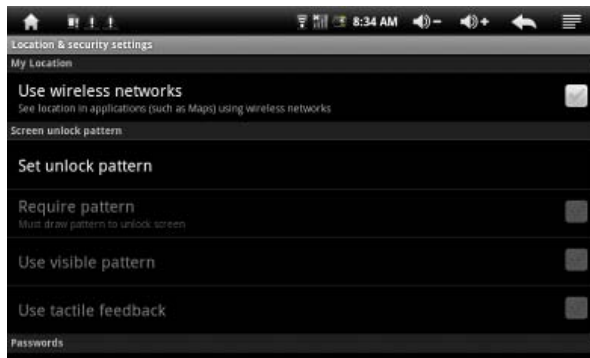

Set unlock pattern

  Tap "set up screen lock", then tap 

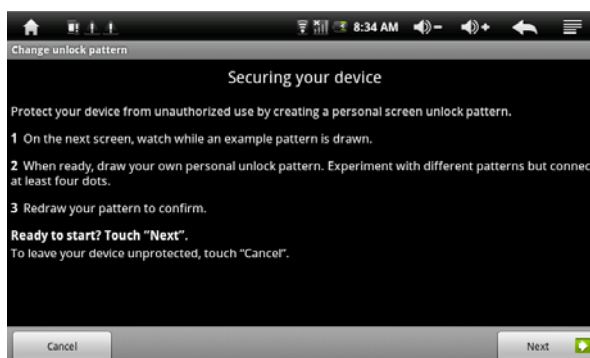


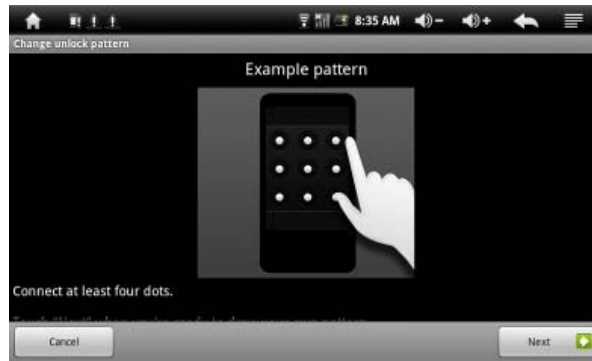

Draw the unlock pattern, at least to connect 4 points, tap “next” ,then finish.


4.4.5.4 Application Program settings

 Tap Application to enter setting interface:

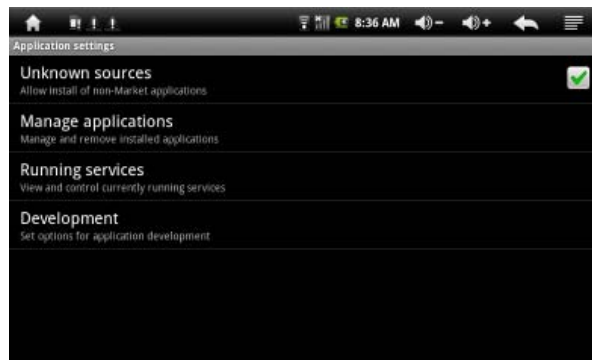


- **Manage applications settings:**

 Tap 【 Manage applications 】 to manage or delete installed applications

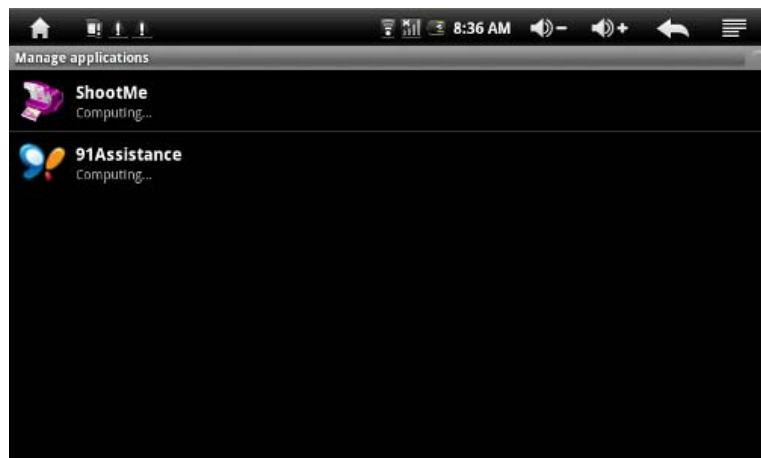


- **Running service settings:**

 Tap **【Running service】** to see and control the running service

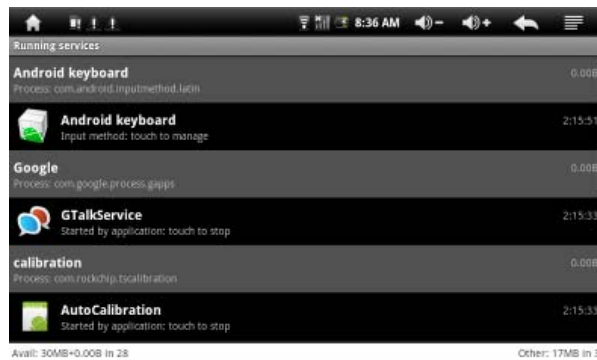


 - **Development setting:** advised to use factory defaults, or any change will make some function not available

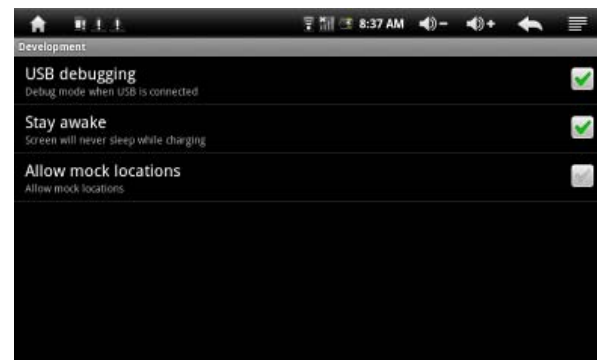


4.4.5.5 SD card & device storage settings

  Tap SD card & device storage to enter following to check total space, available space, format SD card, etc

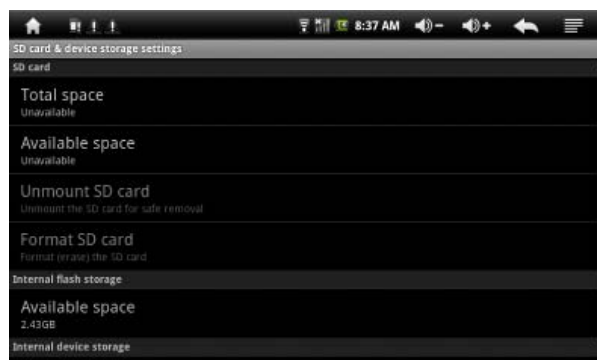


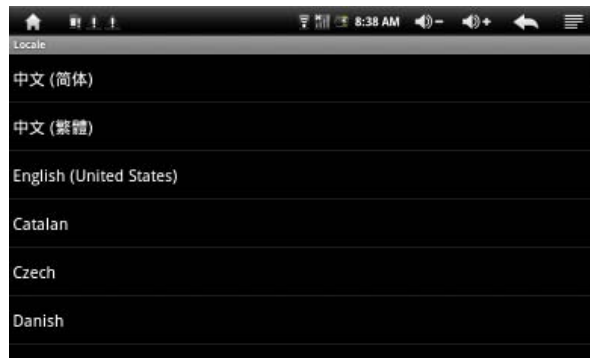 
4.4.5.6 Language Keyboard Settings

Tap **【Language Keyboard】** to enter setting interface

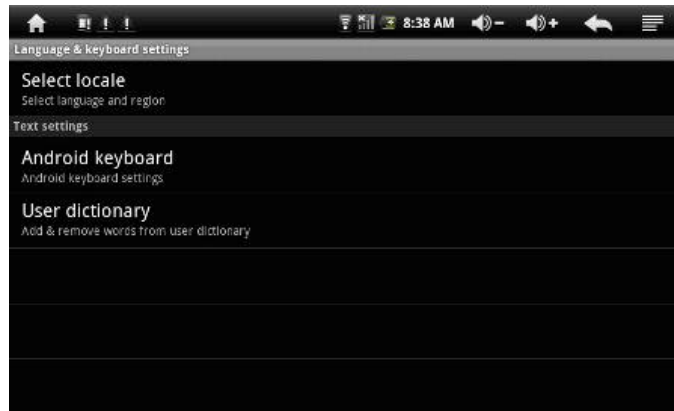 


- **Language Setting:**

The device support multi-languages, you can select operation interface of different languages according to your needs. Select matching language option, tap  to confirm and back



- **Android Keyboard setting:**

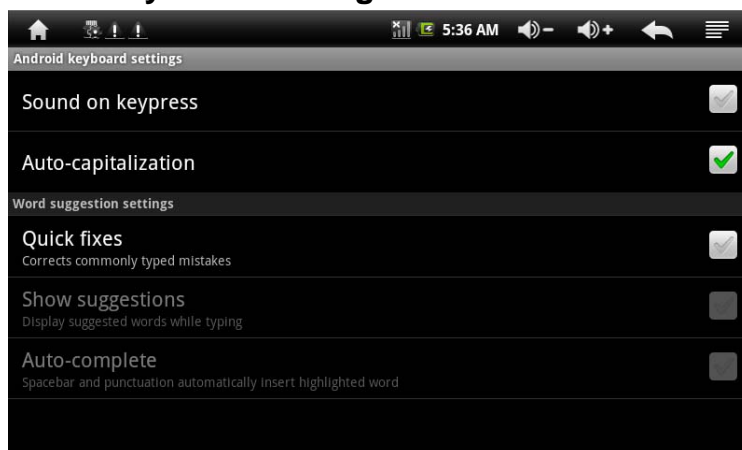


4.4.5.7 Date & Time Setting:

Select Setting Menu > Date and Time into setting interface, select

the ✓ behind the Automatic option , to modify the Date, Time Zone & Time.


- **Date Setting:**

 Tap   to select Day, Month & Year, and tap icon  to confirm OK

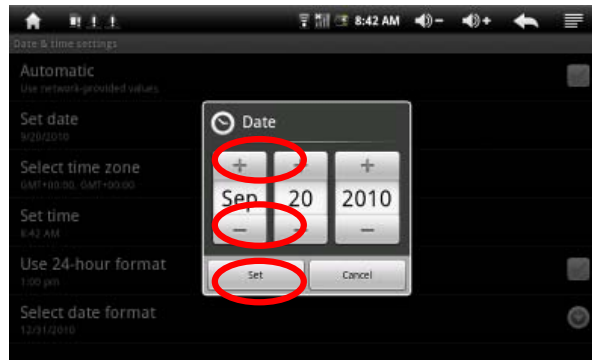


- **Time Zone Setting:**

 Select the time zone you are in and tap:

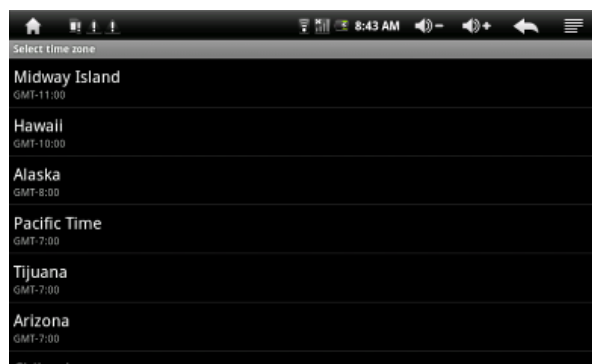


- **Time Setting:**

 Tap   to select hours & minutes, e.g.: 10:50, and tap icon  to confirm OK.

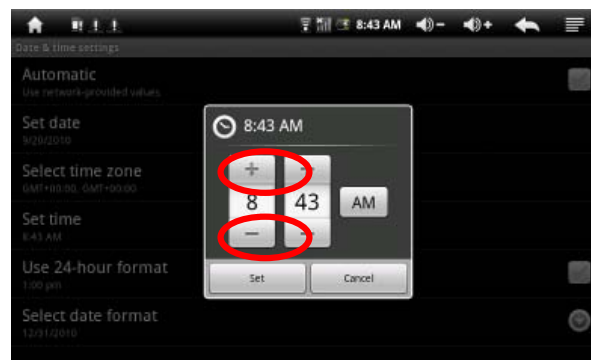

- **Date Format Setting:**

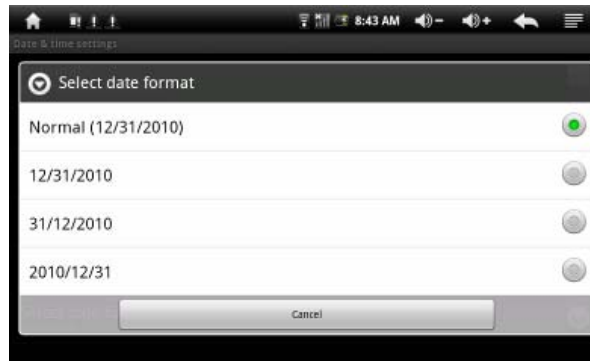 


4.4.5.8 Touch Panel Calibration

Details refer to 3.1 Touch Panel Calibration Section Chapters


4.4.5.9 About the Device

 - Check power consumption, legal information, device state & software version, etc.

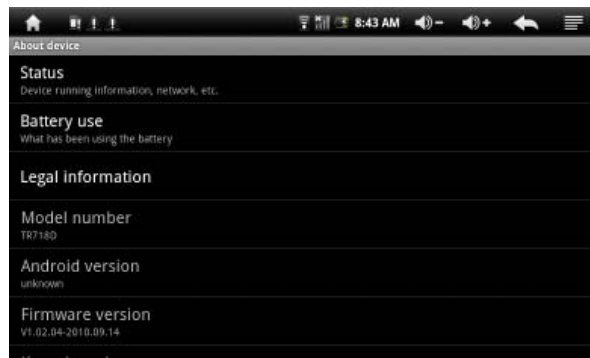

4.5 Desktop Function Icon Setting


4.5.1 Add & Remove Desktop Function Icon:


Tap icon  at top-right corner of main interface, into desktop setting interface, you can select wallpaper and add widget, etc.




Shortcut Icon:



  
Tap icon  into desktop widget interface as follow:

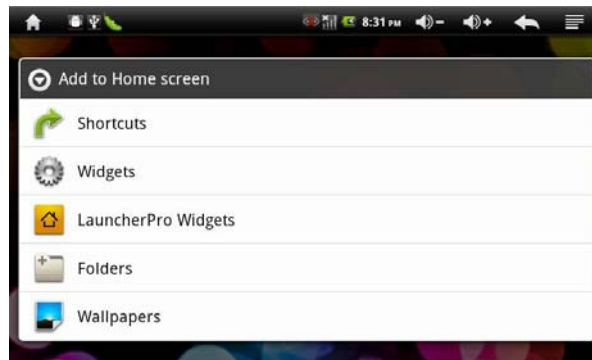

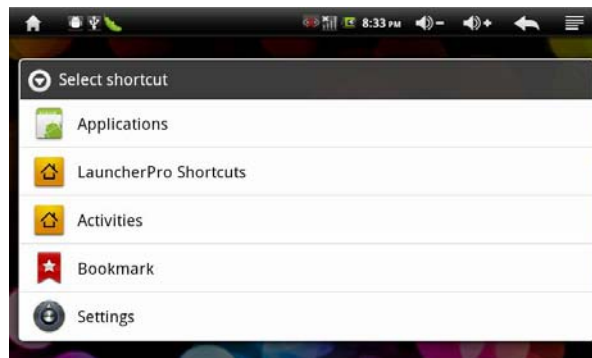

 
Select shortcut icon to add to main interface, tap the matching option to add.

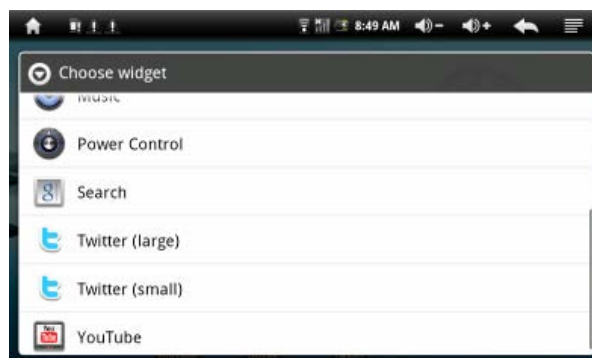

Select desktop widget to add to main interface, tap Search, Calendar, etc to add:



 
4.5.2 Wallpaper Setting:

Click icon  on desktop, pop up toolbar, and tap icon , to change the wallpaper and select the picture you want, tap ,


wallpaper setting succeeded.




4.5.3 Tap icon shortcut to search engine:

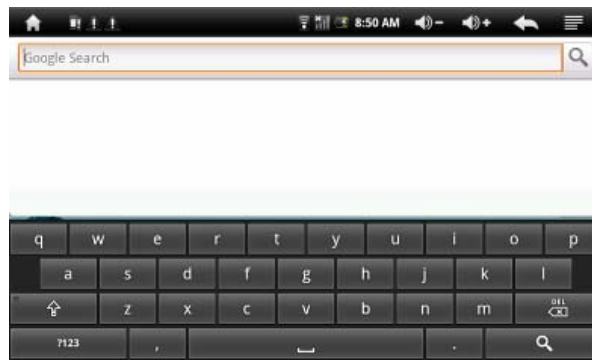


4.5.4 Shortcut Notification

 
Tap icon  to check the current notification status:

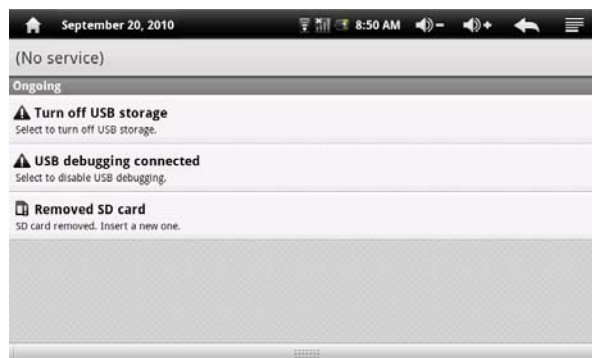


4.5.5 Add, Move or Delete Desktop Icon

Tap icon “Menu for Function Block .  “ at the main interface, into

 function menu list, display all the application icons by pages. Press and drag the application icon to copy to current desktop i.e. set the shortcut on the desktop.

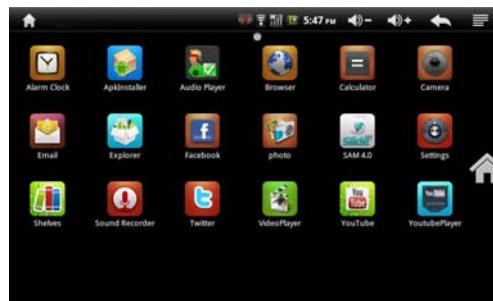

Long press the application icon on the desktop, enter into editing status and you can move the icon. When you drag the icon to "  Menu for Function Block " it turns to delete function, and release the icon you can delete it.

 


5. Troubleshooting

1. Can not turn on the device.
 - ◆ You can not turn on the device when it is below the critical level, please charge the battery connect to the computer via USB

cable or charge via Charger, try to turn on again while ensuring quantity of electricity.

- ◆ Press the RESET button on the top of the device and check if the restarting is normal or not.
 - ◆ Check if the charger is connected well or not.
2. The stand-by time of the MID is too short.
- ◆ The duration of the lithium battery varies with environmental temperature changes and the service conditions. If the environment temperature is too low or too high, the duration of the battery will be affected. It is recommended to use this device at normal temperature!
 - ◆ From the usage of the device, larger screen of the device cost more electricity. In addition, affected by the volume increase, sound field special effects, and other factors such as frequent operation, the actual duration may be different from specified one to a certain extent.
3. No sound via earphone.
- ◆ Please check if the volume setting is 0.
 - ◆ Please check if audio file is broken, and try to play other audio files to confirm. If the audio file is broken, it may cause severe noise or staccato
4. Can not copy files.
- ◆ Please check if the device is connected to the computer correctly.
 - ◆ Please check if the memory space is full.
 - ◆ Please check if the USB cable is broken

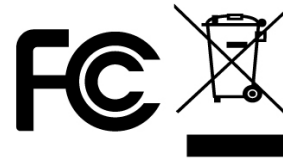

Made in China

Specifications are subject to change without notice.
No part of this document may be reproduced or transmitted
in any form or by any mean, electronics or mechanical
including photocopying and recording
or translated to another language for any purpose